
Tower Project

- Criteria
- Calculations
- Testing
- Report
- Examples
 - Eiffel
 - Trussed Frames
 - Shukhov

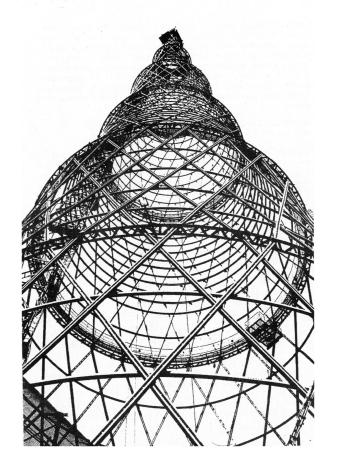

University of Michigan, TCAUP Structures II Slide 1 of 17

Architecture 324 Structures II 2024



Criteria & Procedure

Criteria

- The tower is to be made of wood. Either linear wood (sticks) or wood panels (sheets) can be used. Glue can be used to connect the elements. Gusset plates at the joints are allowed and can also be glued. But **no steel pins** or fasteners may be used.
- Wood: any species. maximum cross-sectional dimension = 1/4".
- NO paper, mylar or plastic or string or dental floss.
- If a member is made by laminating multiple pieces together, the maximum cross-sectional dimension or thickness still cannot exceed 1/4".
- The height of the tower = 48".
- . The tower must hold at least 50 lbs.
- The entire tower can weigh no more than 4 oz.
- The top of the tower must be loadable. The weights will be stacked on top of the tower, but you
 may optionally use a loose piece of MDF or plywood as a tray under the weights. (It will not be
 counted in either weight or load)
- Towers will be graded on their low weight, high load-carrying capacity, and the load/weight ratio.
 The evaluation formula is:

(4/weight in OZ) + (load in LBS/50) + (load LBS/weight OZ)x1.5

• The score will be normalized to a range of 50 to 100. It is used together with report scores to assess your project (a detailed evaluation form is given separately).

Procedure

- 1. Develop a structural concept for a tower meeting the above criteria.
- 2. Analyze the design concept with either hand calculations or a computer program (e.g. Dr. Frame)
- 3. Determine the capacity of the major members and of the overall tower (total capacity in LBS)
- 4. Estimate your expected score using the formula above.
- 5. Write the preliminary report.
- 6. Construct the structural model.
- Test the model. 5-pound steel bars will be placed on top of the model, until the model fails. (bar size: 1 ½" x 2" x 5 13/16").
- 8. Produce final report documenting requirements and process. See also score sheet.

University of Michigan, TCAUP Structures II Slide 3 of 17

Analysis

Use NDS approach

Find load P and stress F'c for each member

Use 1.0 for all factors except C_P

Analysis - the report should include the following:

- Choose wood type and stress properties. Either use values below for typical model grade Basswood
 or use values in the NDS or find test values online. Indicate in the report which values you choose.
- Determine the cross-sectional area of each member. Find the axial force P and the allowable stress F'c. The force P can be determined either by a hand calculated truss analysis or as a second order analysis in Dr. Frame or STAAD.Pro. The stress F'c should be found using the NDS equations for CP and F'c. Other NDS stress adjustment factors (CD, CM, Ct, CF and Ct) can be taken equal to 1.0. Size members based on the predicted load, P and the allowable stress F'c. Target (or predict) some total capacity load for the tower. A minimum of 50 LBS is required. Then size the members based on the force in each member.
- Predict the total weight of the tower. Provide a table with each member type showing, length, section
 and weight for each. Make an estimate of the weight added by glue joints and/or gusset plates. The total
 weight should be under 4 OZ.
- Predict Capacity. Predict the ultimate capacity in pounds that the entire tower can carry based on the
 actual cross-sections chosen. Produce a utilization table to show for each member type (e.g. main
 vertical, horizontal tie, diagonal brace) the utilization ratio fc/F'c based on the predicted total capacity
 load. This ratio should be below 1.0 for all members.
- Calculate the buckling capacity of the tower as a whole. This is done by treating the tower as one
 column loaded at the top, made up in cross section of multiple columns. Show the moment of inertia of
 the tower cross-section, and use it to calculate the critical buckling load using the Euler equation. An
 example of this calculation is given in the slides from the class lecture. The ultimate capacity is the lower
 of the two capacities (critical member or tower as a whole).

$$C_{p} = \frac{1 + \left(F_{cE}/F_{c}^{*}\right)}{2c} - \sqrt{\left[\frac{1 + \left(F_{cE}/F_{c}^{*}\right)}{2c}\right]^{2} - \frac{F_{cE}/F_{c}^{*}}{c}}{c}} \quad (3.7-1)$$

where:

 F_c^- = reference compression design value parallel to grain multiplied by all applicable adjustment factors except C_ρ (see 2.3), psi

$$F_{cE} = \frac{0.822 E_{min}'}{(\ell_e/d)^2}$$

- c = 0.8 for sawn lumber
- c = 0.85 for round timber poles and piles
- c = 0.9 for structural glued laminated timber or structural composite lumber

Analysis

$f_{c} = \frac{P}{A} \le F'_{c}$

Capacity



5900 psi *

Desigr

$$A = \frac{P}{F'_{a}}$$

Properties of Basswood:

F (Flexure)

Density (oven dry)

E (buckling)

F (Compression || to grain)

F (Compression ⊥ to grain)

F (Tension || to grain)

F (Tension ⊥ to grain)

F (Tension ⊥ to grain)

S 4500 psi (estimate)

F (Tension ⊥ to grain)

S 48 psi *

F (Shear || to grain)

986 psi *


www.matweb.com
tested by PvB

Slide 4 of 17

Buckling modes

- Member buckling
- Tower buckling

The lesser of the two controls

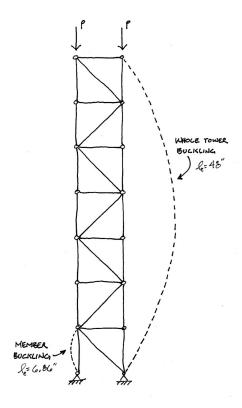


University of Michigan, TCAUP

Structures II

Slide 5 of 17

Buckling modes

Member buckling

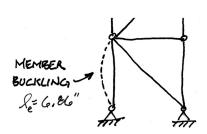

$$\begin{aligned} & \int_{C} = 6.86 \\ & \frac{1}{2} = \frac{6.86}{0.25} = 27.44 \end{aligned}$$

$$\begin{aligned} & \int_{C} = \frac{6.86}{0.25} = 27.44 \end{aligned}$$

$$\begin{aligned} & \int_{C} = \int_{C} = 4745 \, \text{psi} \\ & \int_{C} = \frac{.822 \, (1650000)}{27.44^2} = 1801 \, \text{psi} \end{aligned}$$

$$\begin{aligned} & C_{p} = \frac{1 + 0.38}{2(.8)} - \sqrt{\frac{1 + 0.38}{2(.8)}^{2} - \frac{0.38}{.8}} \end{aligned}$$

$$C_{p} = 0.343$$

$$\begin{aligned} & \int_{C} = 0.343 \\ & \int_{C} = 4745 \, (0.343) = 1630 \, \text{psi} \end{aligned}$$

$$\begin{aligned} & \int_{C} = 4745 \, (0.343) = 1630 \, \text{psi} \end{aligned}$$

$$\begin{aligned} & \int_{C} = 4745 \, (0.343) = 1630 \, \text{psi} \end{aligned}$$

Buckling modes

Tower buckling

$$I = \sum I + \sum Ad^{2}$$

$$4\left[\frac{.25(.25)^{3}}{12}\right] + 4\left[(.25 \times .25) 3^{2}\right]$$

$$I = 0.0013 + 2.25 = 2.251 \frac{1}{12}$$


$$r = \sqrt{\frac{I}{A}} = \sqrt{\frac{2.251}{0.25}} = 3''$$


$$\frac{KR}{F} = \frac{1(48)}{3} = 16$$

$$P_{cr} = \frac{\pi^{2}IE}{(KR)^{2}} = \frac{4^{2}(2.251)(1450000)}{14^{2}}$$

$$P_{cr} = 143,275 \text{ lBs}$$

$$P_{cr}/4 = 35818 \frac{1}{2} \text{ stick}$$

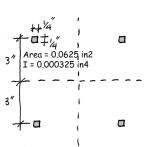

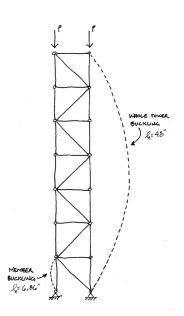


University of Michigan, TCAUP

Structures II

Slide 7 of 17

Dr. Frame 2D

- Material properties
 - Provided test values
 - NDS
 - Other (online)
- Member dimensions
 - Use actual dimensions
- Connections
 - Use pinned connections
- Second order analysis

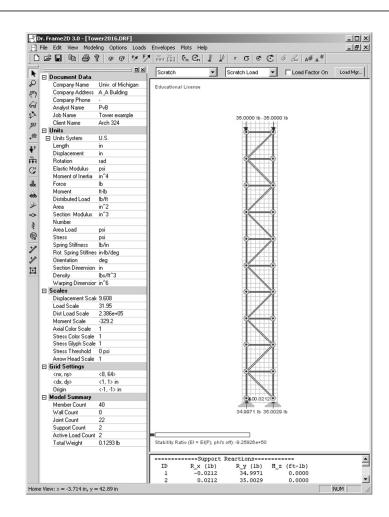



Optimal Topologies

Form Exploration and GA-Based Optimization of Lattice Towers Comparing with Shukhov Water Tower

(A Khodadadi, 2014)



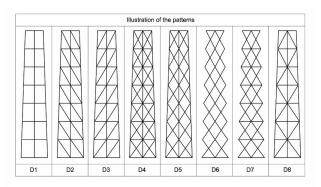

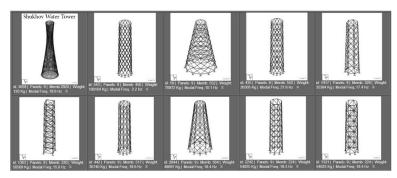


University of Michigan, TCAUP

Structures II


Slide 9 of 17

Gustave Eiffel tower

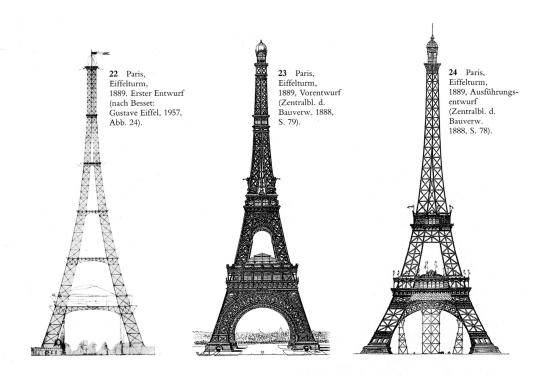


Eifel 1868-71

1886-89

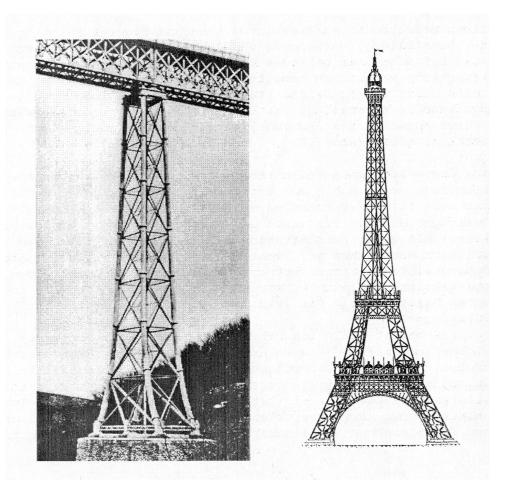

University of Michigan, TCAUP Structures II Slide 11 of 17

Alexander Graham Bell

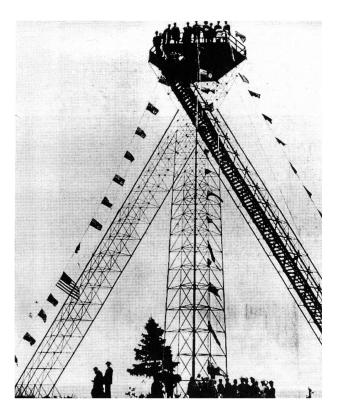


Pforzheim towers





Büchenbronn

1883 25m

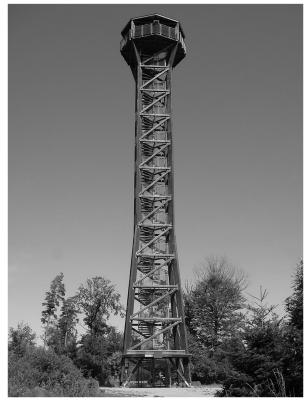

Hohe Warte

2002 40m

University of Michigan, TCAUP

Structures II

Slide 13 of 17

Vladimir Shukhov 1853-1939






Vladimir Suchov



High tension power line towers on the Oka, 1927-1930 114 m



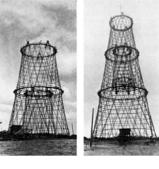




University of Michigan, TCAUP


Structures II

Slide 15 of 17

Vladimir Suchov

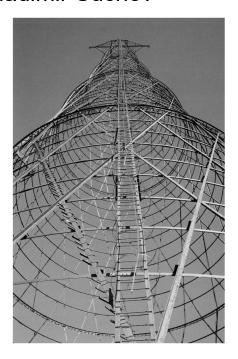

High tension power line towers on the Oka, 1927-1930 114 m

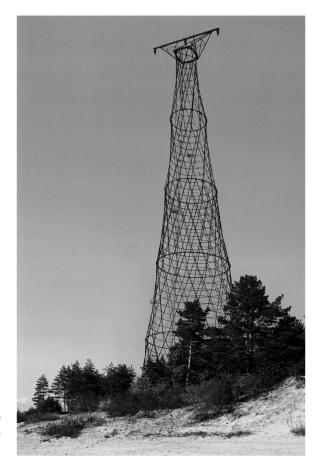

Jörg Schlaich
Killesbergturm, Stuttgart 2001





University of Michigan, TCAUP Structures II Slide 17 of 17